



### **Connecting to WIRES-X via the Repeater Using an FTM-400XDR**

1. Press **X** button to select the DN (or DN) communication mode
2. Press and Hold **X** button to engage WiRES-X

### **Engaging a WiRES-X Room**

1. Press the “**Down Arrow**” for the Room Menu
2. Select and hold **ALL** for a list of active rooms
3. Press and Select “**ROOM**” to engage
4. Press **Back** arrow to reveal Room name and information

### **Selecting another room**

1. Press the “**Down Arrow**” for the Room Menu
2. Select and hold **ALL** for a list of active rooms
3. Press and Select “**ROOM**” to engage
4. Press **Back** arrow to reveal Room name and information

### **Dis-engaging the WiRES-X Room**

1. Press and hold the \* (star) button on the mic
2. Wait 60 seconds to assure it has switched back to W9RH-Room

### **Disconnecting your radio from the repeater**

1. Press and Hold the **X** button to disengage WiRES-X
2. You are still in C4FM mode

Other Yaesu radios with WiRES-X capability may have similar connection sequences. Please look at the WiRES-X Bible appearing elsewhere on this web page for specific instructions.