

## Connecting and Disconnect from WiRES-X Rooms

### **FTM-400**

Connect:

Press X (WiRES-X) key to engage WiRES-X

Select Down Arrow

Scroll to ALL and Select

Scroll menu and Select Room

Disconnect:

Press \* on your microphone to disengage Room

Press X (WiRES-X) key to disengage WiRES-X

### **FT-70DR**

DN Mode

Connect:

Press F+AMS keys to access WiRES-X

Turn knob to En\* \_ \_ \_ \_ \_

Enter Room # and press AMS key

Disconnect:

Turn knob to En\* \_ \_ \_ \_ \_

Enter Room #99999 and press AMS key

Press MODE key to return to disengage WiRES-X and return to DN mode

### **FT5D**

DN Mode

**Connect:** Press WiRES-X key

**Connect:** Search & Direct > ALL > (scroll available Rooms) > PTT to select

**Disconnect:** Press and Hold the BAND key

Press WiRES-X key to disengage WiRES-X and return to DN mode